



---

**FUSION**

---






---

**FUSION**

---




**LEATHER + SYNTHETIC COMBO**

Flat

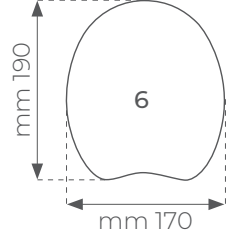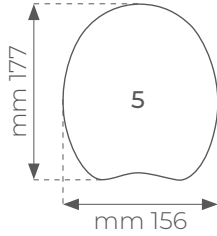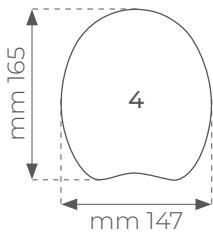


Product	Thickness	Code
Flat number 4	mm 5	0342
Flat number 5	mm 5	0343
Flat number 6	mm 5	0344

# 2° Degree


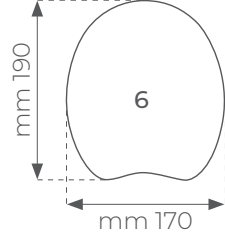
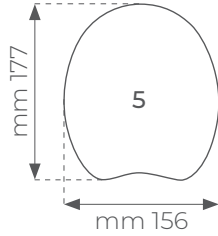
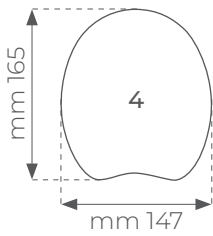


WEDGE IN TWO DEGREES FROM 9 TO 3 MM

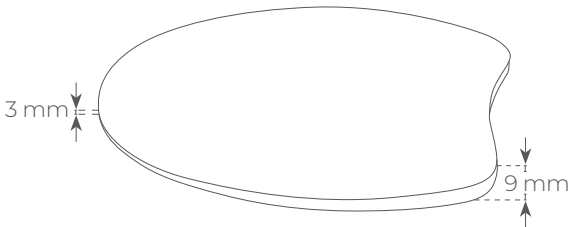


Product	Code
2° Degree number 4	0345
2° Degree number 5	0346
2° Degree number 6	0347

**3° Degree**

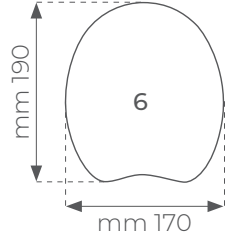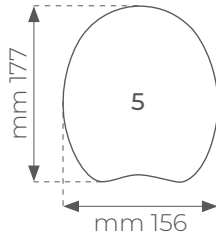
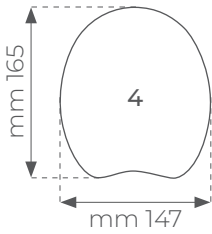
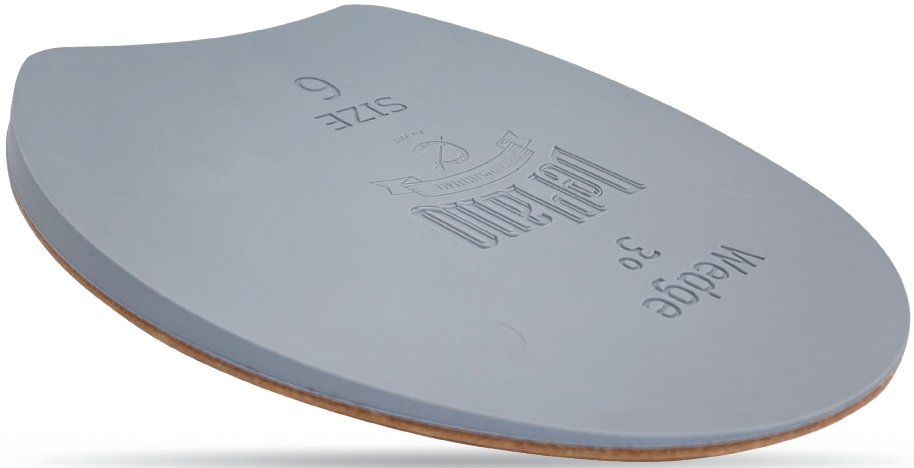


**WEDGE IN TWO DEGREES FROM 12 TO 3 MM**

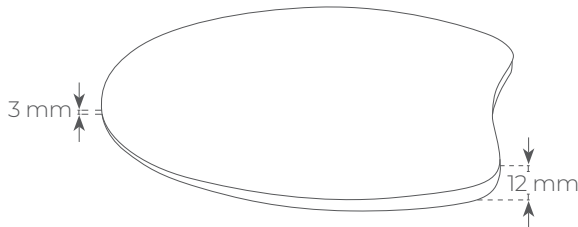




Product	Code
<b>3° Degree number 4</b>	0348
<b>3° Degree number 5</b>	0349
<b>3° Degree number 6</b>	0350

# Frog Support Flat

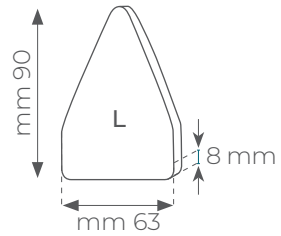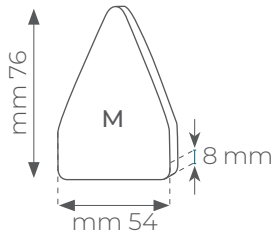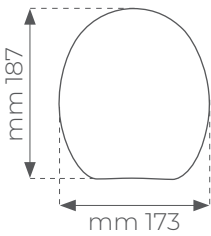


Product	Thickness	Code
Frog Support Flat M	mm 5	0337
Frog Support Flat L	mm 5	0336

Frog Support 2° Degree

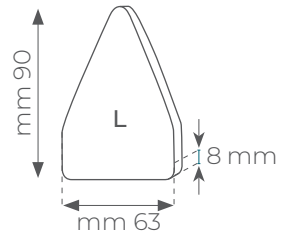
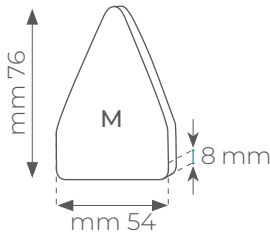
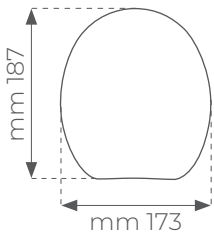


WEDGE IN TWO DEGREES FROM 9 TO 3 MM

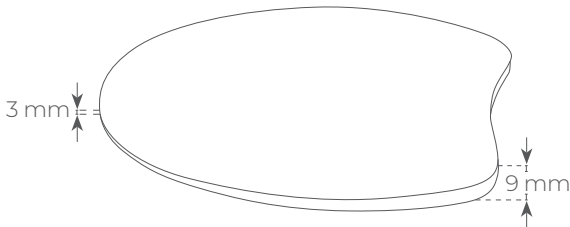


Product	Code
Frog Support 2° Degree M	0339
Frog Support 2° Degree L	0338

# Frog Support 3° Degree


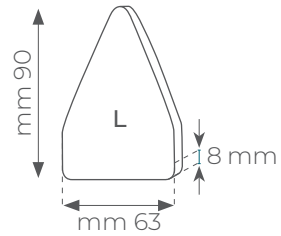
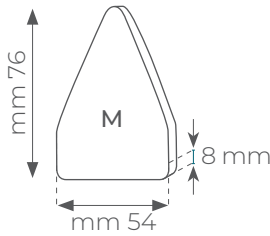
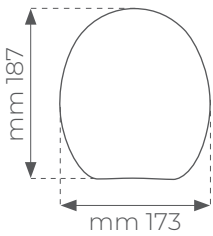


## WEDGE IN TWO DEGREES FROM 12 TO 3 MM

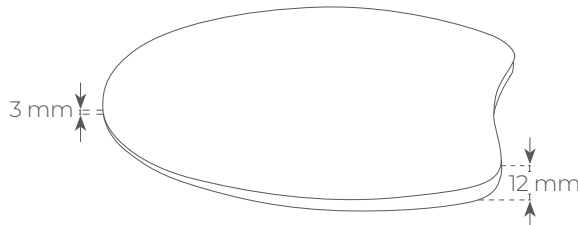





Product	Code
Frog Support 3° Degree M	0341
Frog Support 3° Degree L	0340

**Honey Comb Flat**

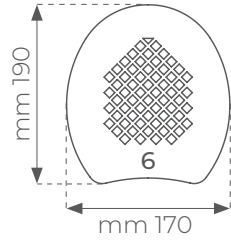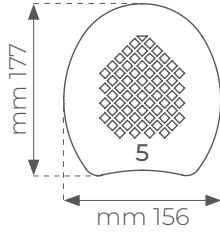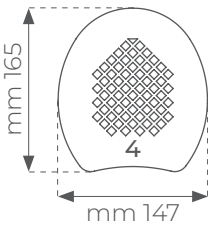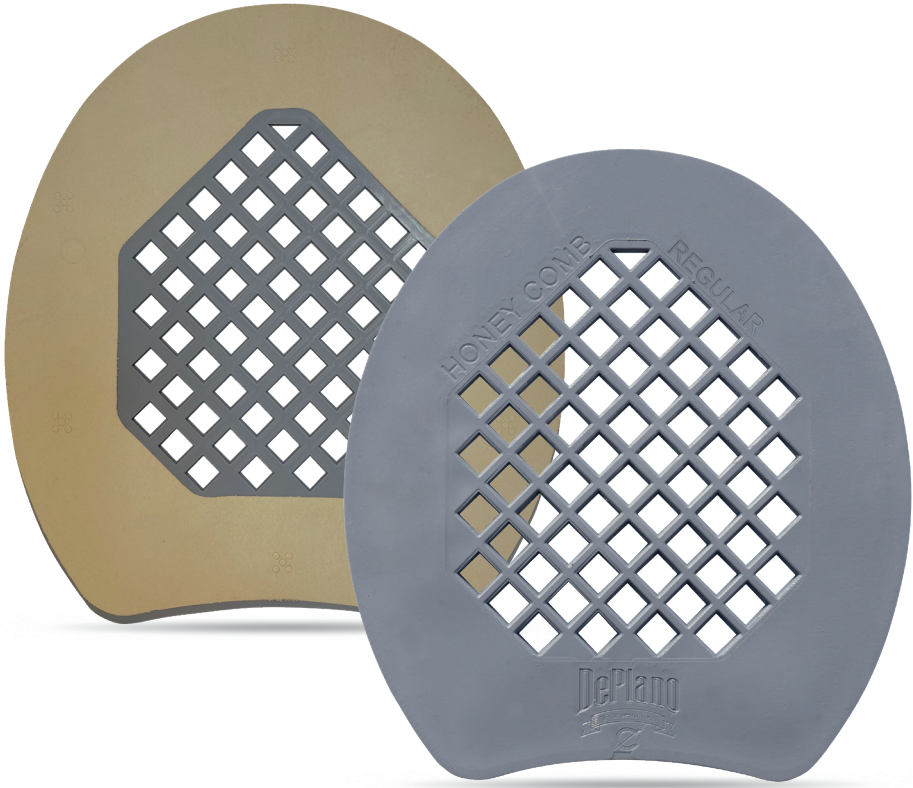


Product	Thickness	Code
<b>Honey Comb Flat 4</b>	mm 5	0414
<b>Honey Comb Flat 5</b>	mm 5	0415
<b>Honey Comb Flat 6</b>	mm 5	0416

# Honey Comb 2° Degree

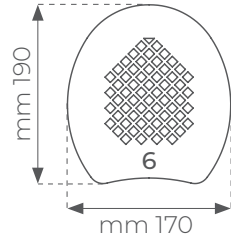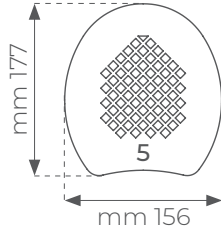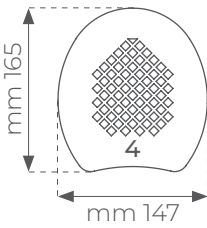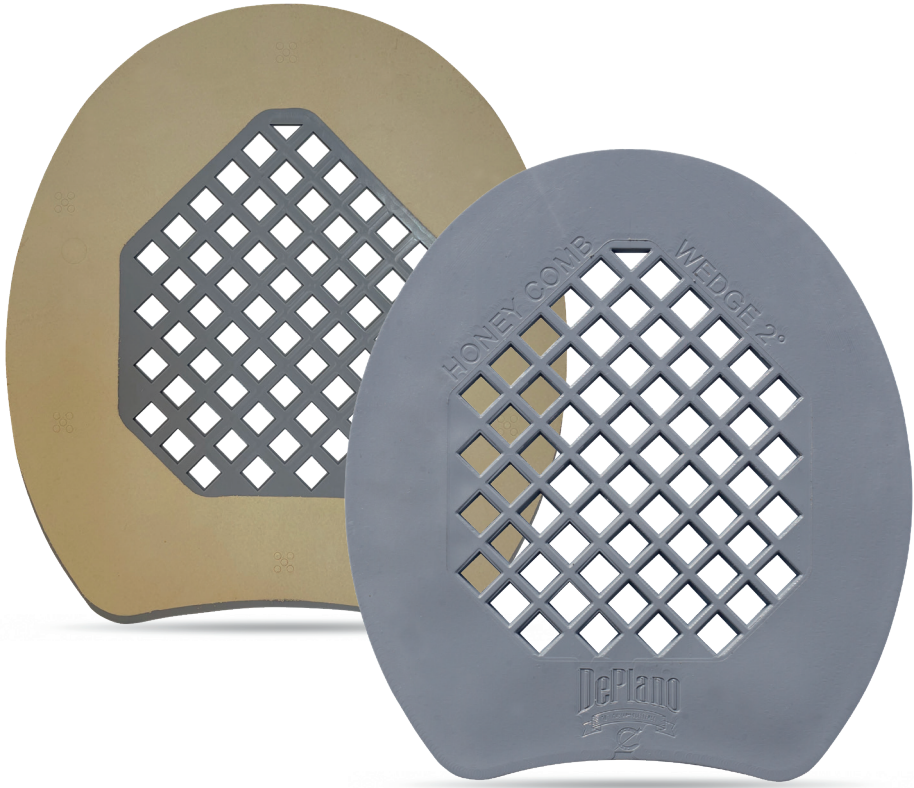


WEDGE IN TWO DEGREES FROM 9 TO 3 MM

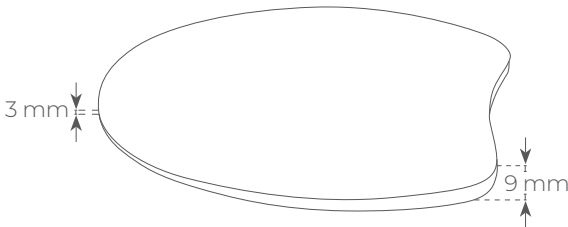




Product	Code
2° Degree number 4	0417
2° Degree number 5	0418
2° Degree number 6	0419

**Frog Support Shell Pads Flat**

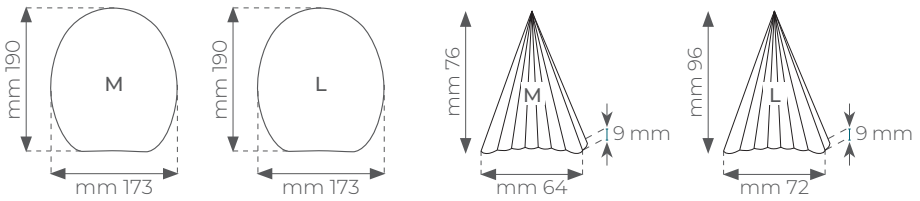


Product	Code
Shell Pads Flat M	0377
Shell Pads Flat L	0378

# Fusion Frog Support Shell Pads 2° Degree


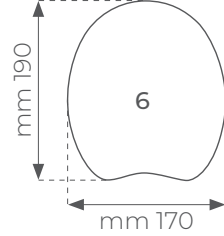
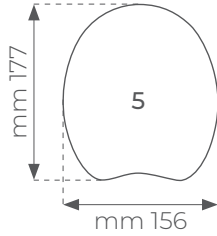
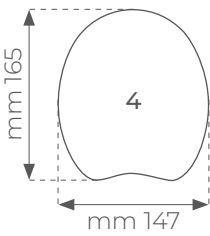


## WEDGE IN TWO DEGREES FROM 3 TO 9 MM

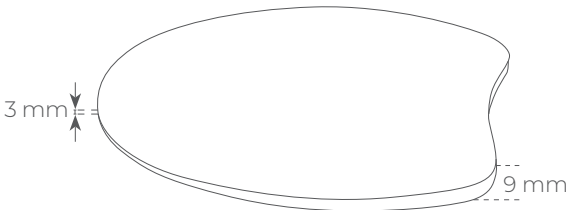


Product	Code
2° Degree number 4	0390
2° Degree 5	0391
2° Degree 6	0392

**Fusion Frog Support Shell Pads 3° Degree**

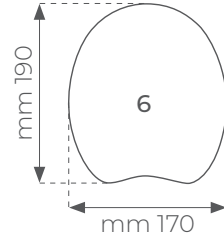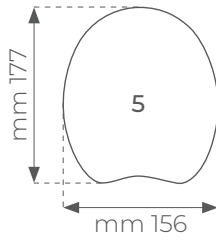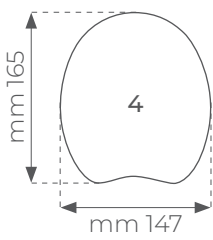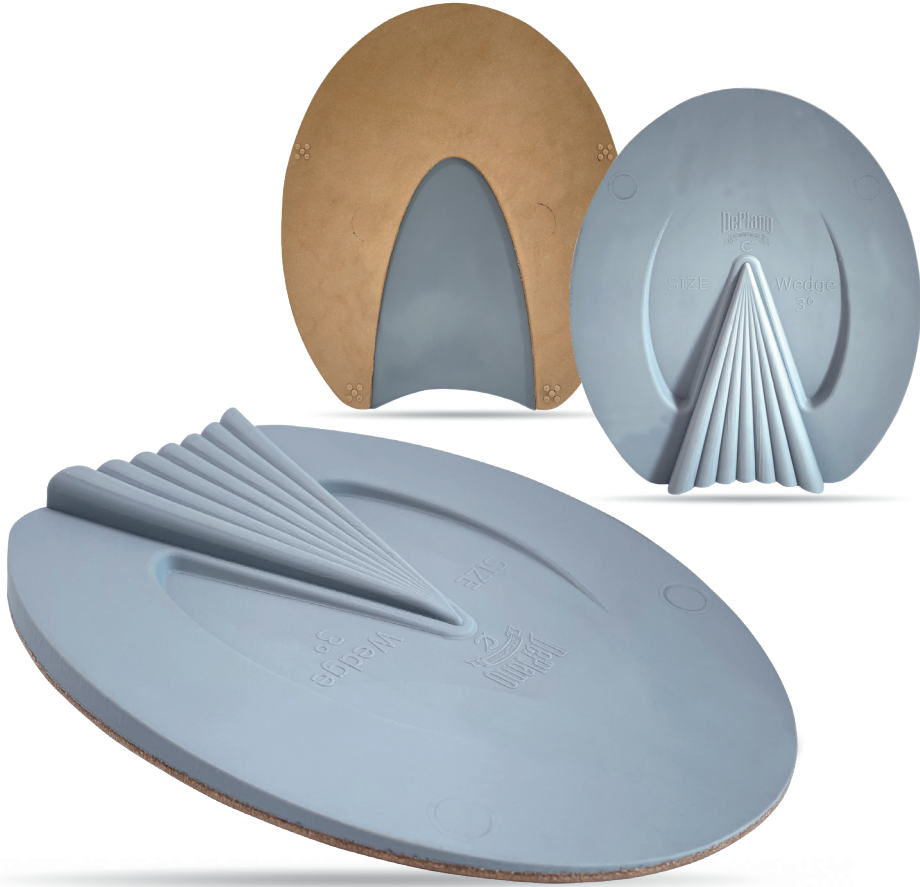

**WEDGE IN TWO DEGREES FROM 3 TO 11/12 MM**

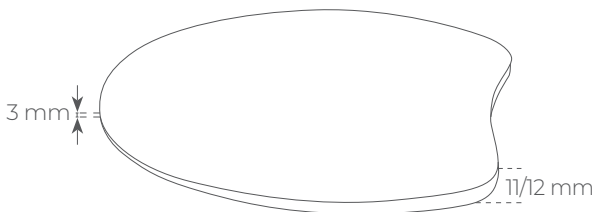

Product	Code
<b>3° Degree number 4</b>	0379
<b>3° Degree number 5</b>	0380
<b>3° Degree number 6</b>	0381





[www.deplanogoods.com](http://www.deplanogoods.com)

**DePlano Sas**

Via R. Ossani 34 • 48018 Faenza (RA) • ITALY  
Office +39 340 4229860 • Phone +39 335 8444870  
[deplanoitaly@gmail.com](mailto:deplanoitaly@gmail.com)